


# Ravetech


## Installation Guide for 2012+ Suzuki DL650 V-Strom

[www.ravetechmotorcycles.com](http://www.ravetechmotorcycles.com)

- Remove the existing bottom radiator mounting bolt found under the rubber flap and fit the guard into position locating the top brackets either side of the top mount points.

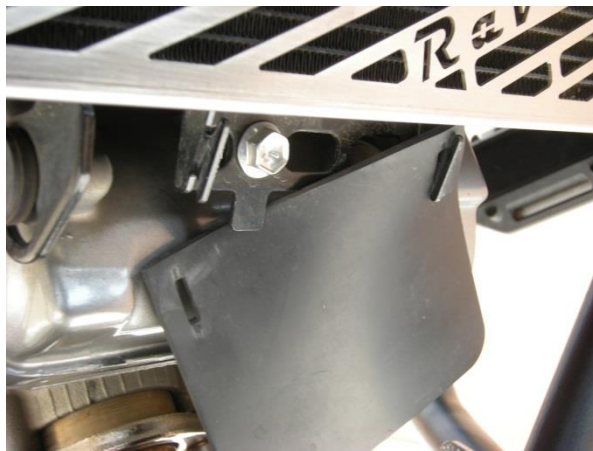

- Install the 2 x M6 nuts and bolts in the top mounting as shown and the existing bottom bolt. Tighten all three bolts and replace the rubber flap.

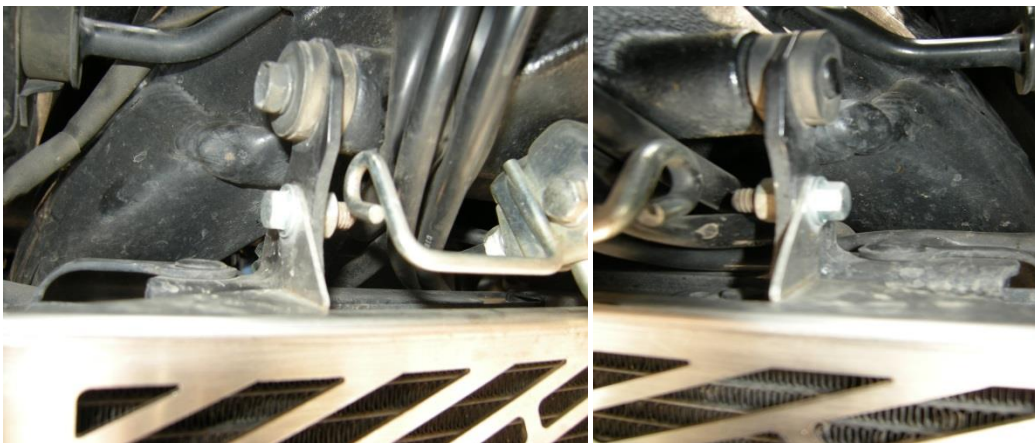

All work undertaken should be carried out by a competent person as improper fitment may cause failure resulting in possible injury which Ravetech will not be liable for.